

 
 
6 CHANGING BATTERIES IN YOUR ZAP® HIKE 'N STIKE™

WARNING: Make sure the ON/OFF switch is in OFF position.

NOTE: Batteries may be covered with a clear plastic film for protection during shipping. This plastic must be removed for proper battery function.

Before using first time

- Make sure your ZAP® Hike 'n Strike is switched to power-off position before installing the batteries.
- Open battery compartment cap and install 3 new lithium CR123 batteries, noting the correct polarity. (Negative end goes in first) Replace the battery cap.

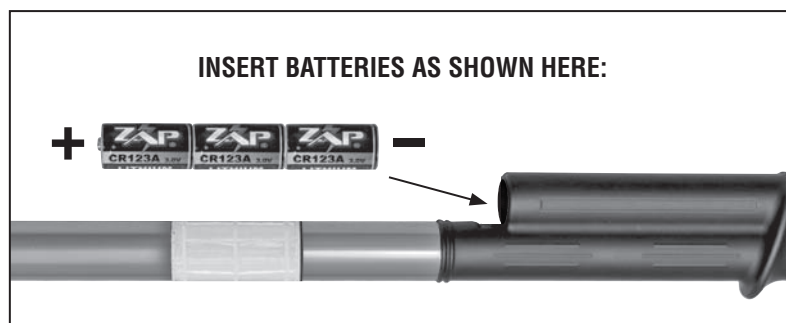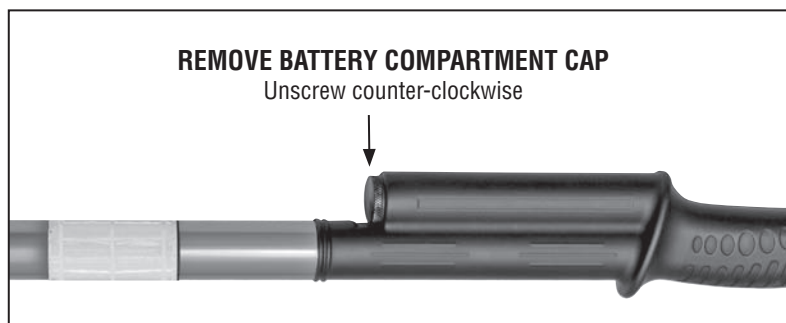

Replacement of batteries

- When the electric arc of your ZAP® Hike 'n Strike gets weak, it is time to replace the batteries.
- Always use CR123A lithium batteries. For best performance, use genuine ZAP® brand batteries.

LIMITED TWO-YEAR WARRANTY

All ZAP® products must be registered with PS PRODUCTS, with proof of purchase, to validate the warranty.

All ZAP® products are guaranteed for 2 years from purchase date to be free from defective materials and workmanship.

CONDITIONS OF SALE: Purchase of this product is an agreement by the purchaser/user to hold all sellers and manufacturers harmless of all liabilities and damages. The purchaser/user assumes all responsibility for the use and misuse of this product. Check your state and local laws in regard to possession and/or use of stun guns.

The warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, moisture, the affixing of any attachment not provided with the product, loss of parts or using the unit in any manner not in accordance with the included instructions.

The warranty will be voided if the unit has been opened or tampered with in any way (unless by an authorized dealer) or if any unauthorized replacement parts have been used.

This warranty extends to the ORIGINAL OWNER only, beginning on the date of purchase and is not enforceable by any other party.

Damage or loss occurring during shipment is not covered by this warranty.

A COPY OF SALES RECEIPT OR PROOF OF PURCHASE MUST BE PROVIDED WHEN RETURNING FOR WARRANTY REPLACEMENT.

Original owner is responsible for all shipping charges.

Mail the Warranty Registration Form (included in package) with proof of purchase to:

PS PRODUCTS, INC.
3120 Joshua Street, Little Rock, Arkansas 72204



PS PRODUCTS, INC.

501-374-7900 • Toll Free: 1-877-374-7900

www.psproducts.com • www.PersonalSecurityProducts.net • email: info@psproducts.com

READ and SAVE these instructions before charging and before use.

ZAP® Hike 'n Strike™ Hiking Staff

STUN DEVICE
with **Spike Electrodes**
and **Flashlight**

- Great for camping, hiking or just walking
- Secure rubber coated, non-slip moulded grip
- Weight 18 oz. with batteries
- Includes 3 lithium CR123A batteries, wrist strap, extra end cap and removable reflective band



 
MODEL
ZAPHS



1 WARNING


- This device is not water-resistant. Keep away from water, rain, etc. If any liquid or foreign object has entered the unit, do not use, consult your authorized dealer.
- Do not touch the internal parts. These are high tension circuits that may cause severe electric shock.
- Do not open, disassemble or modify this device, as it may cause damage to the unit. For internal repairs, consult your authorized dealer.
- Keep away from flammable materials.
- Never store near hot objects, in direct sunlight or at a temperature above 140°F.
- Keep out of reach of children.
- Use only in a lawful manner. Check state and local laws for stun gun restriction
- Do not discharge the unit into the air for more than 1 second at a time. Continuous firing for a longer duration can damage unit and will void the warranty.
- This device may only be sold to a person 18 years or older.

2 YOUR ZAP® HIKE 'N STIKE™

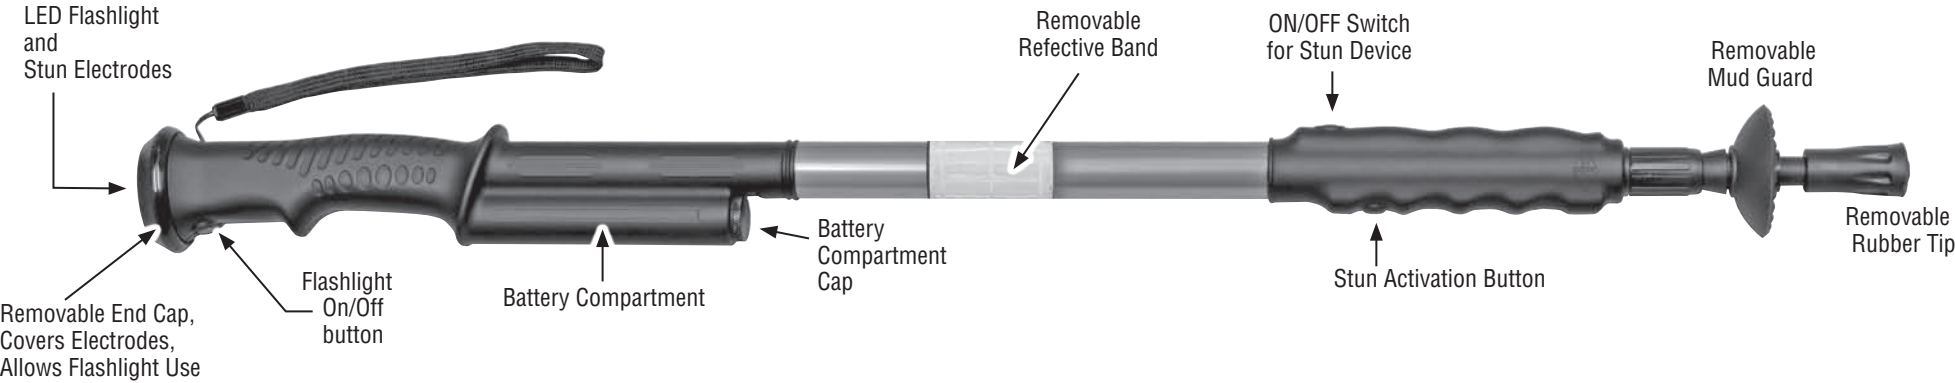


3 ADJUSTING THE LENGTH

 WARNING: Before adjusting, make sure the ON/OFF switch is in OFF position. Loosen the staff sections by twisting COUNTER-CLOCKWISE, one or both sections to the desired length, then turn CLOCKWISE to tighten in place.

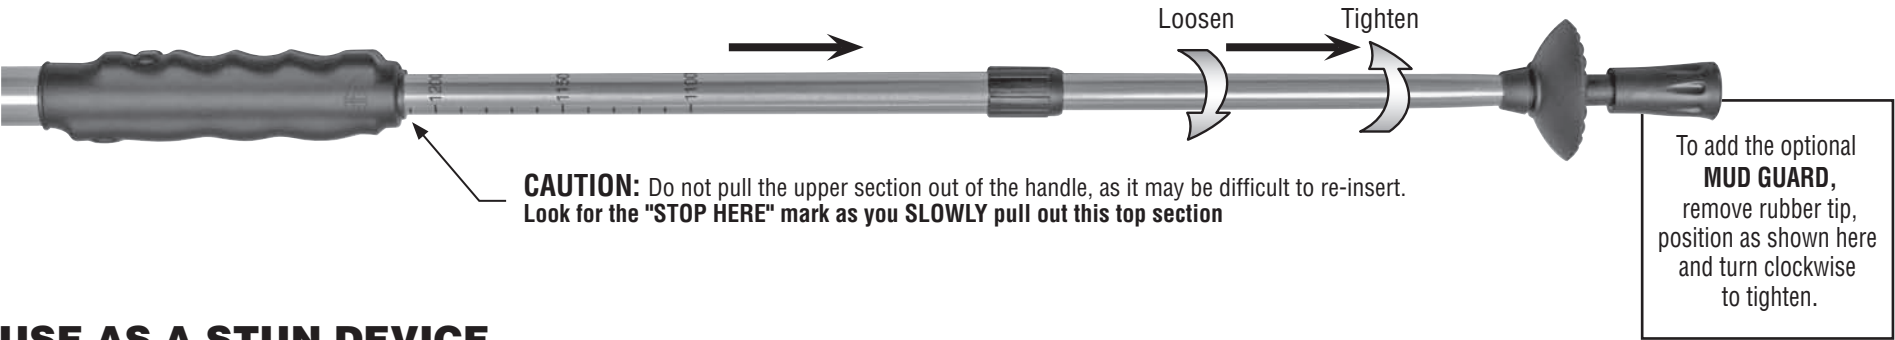


4 USE AS A STUN DEVICE

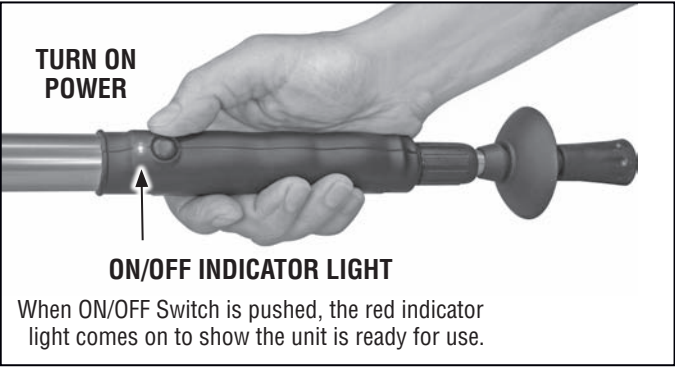 

5 USE AS FLASHLIGHT

TURN ON FLASHLIGHT USING THE FLASHLIGHT BUTTON

 Push the Flashlight ON/OFF button at the handle

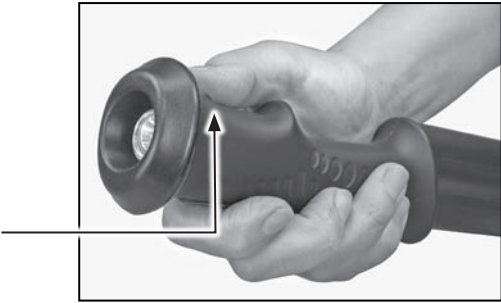

- WARNING -

USE A ZAP® STUN DEVICE ONLY AS A DEFENSIVE WEAPON. This product is suitable to be carried at all times, including walking, jogging, hiking, bicycling, entering or leaving buildings, etc. The ZAP® should only be used when you would be justified to prevent an unwanted encounter.

TURN ON ON/OFF SWITCH TO ON. The red Stun-Ready light comes on, indicating unit is ready for use. Push Stun Activation Button to discharge. Keep your hands and other body parts away from stun electrodes, as severe shock may occur.

A SHORT BLAST (1/4 second) will startle an attacker, cause minor muscle contractions and can have a repelling effect.

A MODERATE BLAST (1 - 4 seconds) can cause attacker to fall and can cause mental confusion. It may make the assailant unwilling to continue attack, but they will be able to get up almost immediately.

A FULL BLAST of 5 seconds or more can immobilize an attacker, causing disorientation, loss of balance, falling to the ground, weakness and leaving them dazed for several minutes afterwards.

THE ZAP® CHARGE will have an effect anywhere on the body, but the maximum effect is in areas marked with an "X" in the drawing.

While using a ZAP® Stun Device, you cannot suffer a charge-back to your own body, even if the attacker is holding you.

BATTERIES: Test fire your ZAP® Stun Device periodically for familiarity, performance and reliability. You should replace the batteries when the electrical arc gets weak.

Always keep stun guns out of the reach of children. Keep away from flammable gasses, as an explosion may occur. Must be 18 to purchase. ID check required. Check state and local laws regarding product usage.

